

T-TOP

A HIGH QUALITY T-TOP
AN IDEAL CANOPY FOR CENTRE CONSOLE BOATS


T-TOP PARTS AND COMPONENTS

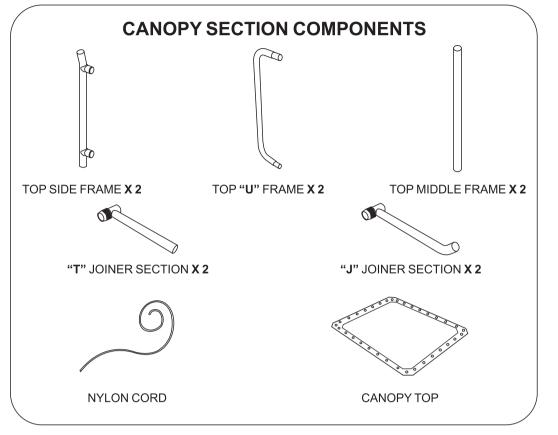


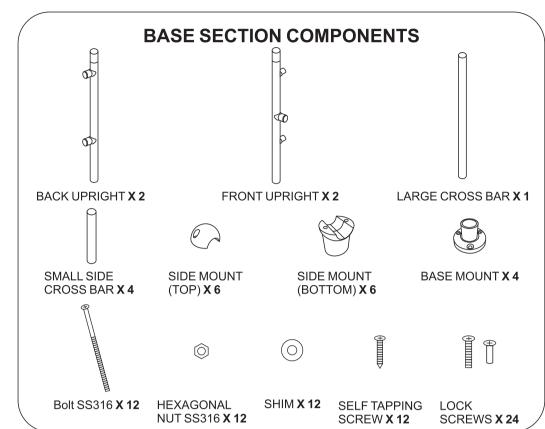



ASSEMBLY INSTRUCTIONS


1. ASSEMBLING THE CANOPY SECTION

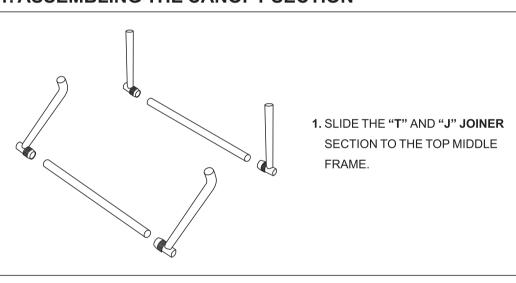

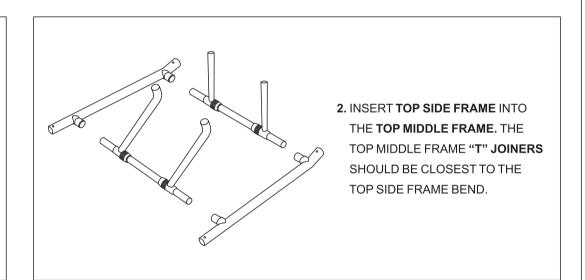

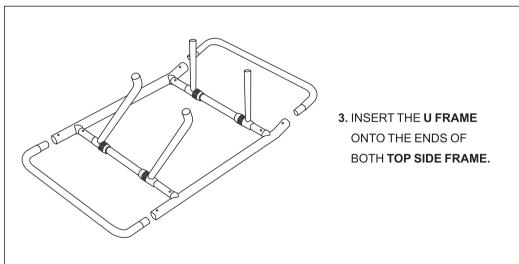


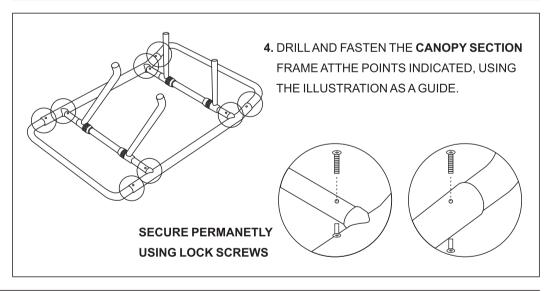

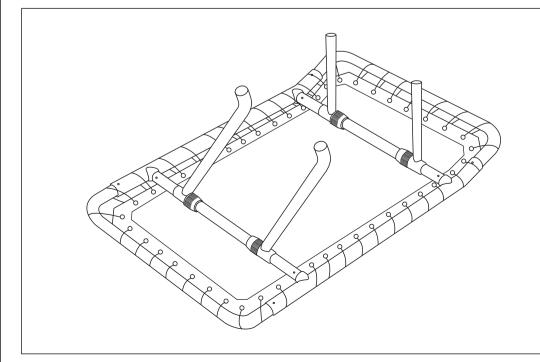


5. LAY OUT THE CANOPY FABRIC TOP SIDE
DOWNARD PLACE THE INVERTED FRAME
OVER IT. LACE NYLON CORD THROUGH
THE EYELETS AND FRAMES. ENSURE IT
IS EVENLY THREADED AND TIGHT.


2. ASSEMBLING THE BASE SECTION

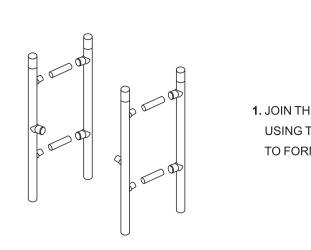

1. JOIN THE FRONT AND BACK UPRIGHTS USING THE **SMALL SIDE CROSS BAR** TO FORM TWO "H" FRAMES.

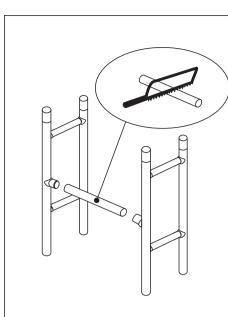


2. CONNECT THESE TWO "H" FRAMES USING
THE LARGE CROSS BAR. THE CONNECTOR
MUST BE CUT TO THE WIDTH OF YOUR
CONSOLE + 95MM.

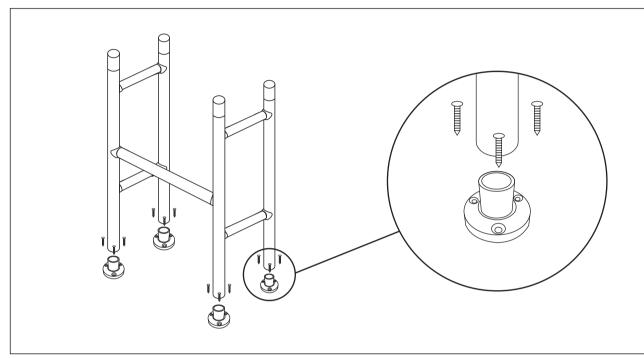


3. ATTACH THE BASE MOUNTS TO THE FRAME. TIGHTEN MOUNTS USING THE SCREW ON BASE.

3. MOUNTING THE BASE SECTION

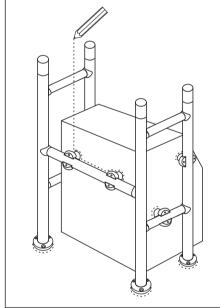

1. MARK THE LOCATIONS WHERE YOU WILL FIT THE MOUNTS ON THE FRONT OF YOUR CONSOLE. (PLACING THEM AS FAR APART AS POSSIBLE).

MARK THE CONSOLE **SIDE MOUNTS** POSITION (AS HIGHT AS POSSIBLE).

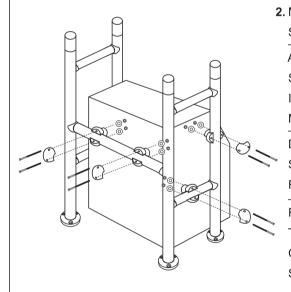

2. MARK AND DRILL POSITONS FOR ALL SIDE MOUNTS.

ATTACH MOUNTS LOOSELY, USING 1/4"

SCREWS (SUPPLIED) TO HOLD FRAME
IN PLACE WHILE FASTENING BASE
MOUNTS INTO POSITION.
DRILL THROUGH BASE MOUNTS TO

DRILL THROUGH BASE MOUNTS TO SECURE BASE SECTION TO BOAT FLOOR. (SUPPLIED)

FINISH ASSEMBLY OF BASE SECTION
TIGHTEN ALLSIDE MOUNTS AND SECURE
CROSSBARS USING SELF TAPPING
SCREWS (SUPPLIED).

